

## Fire Rescue Air Cushion Rescube 20

100305

- The main body of the cushion is a frame and a wrapper covering the outside. Inside of it, it has two air layers on the top and on the bottom
- Injection valve: It is the valve connected so that consists of an air column forming
- Exhaust valve: It is the valve used to remove air inside the air column, after a situation is handled
- Over pressure valve: Automatically controlling air pressure when it exceeds a certain pressure level
- Connecting hose: It is the connecting part to inject 300 bar compressed air to the cushion stably
- Cylinder: Compressed air cylinder

### Technical specifications

Floors			
Classification	5 floors	10 floors	15 floors
Dimensions (m)	4 x 4 x 2	5 x 7 x 2.5	6 x 8 x 3
Weight (kg)	70	120	170
Set-up time (sec):	40	40	70
Recovery time (sec.)	5	8	17
Injection valve (quantity)	1	2	2

